

Fig.1

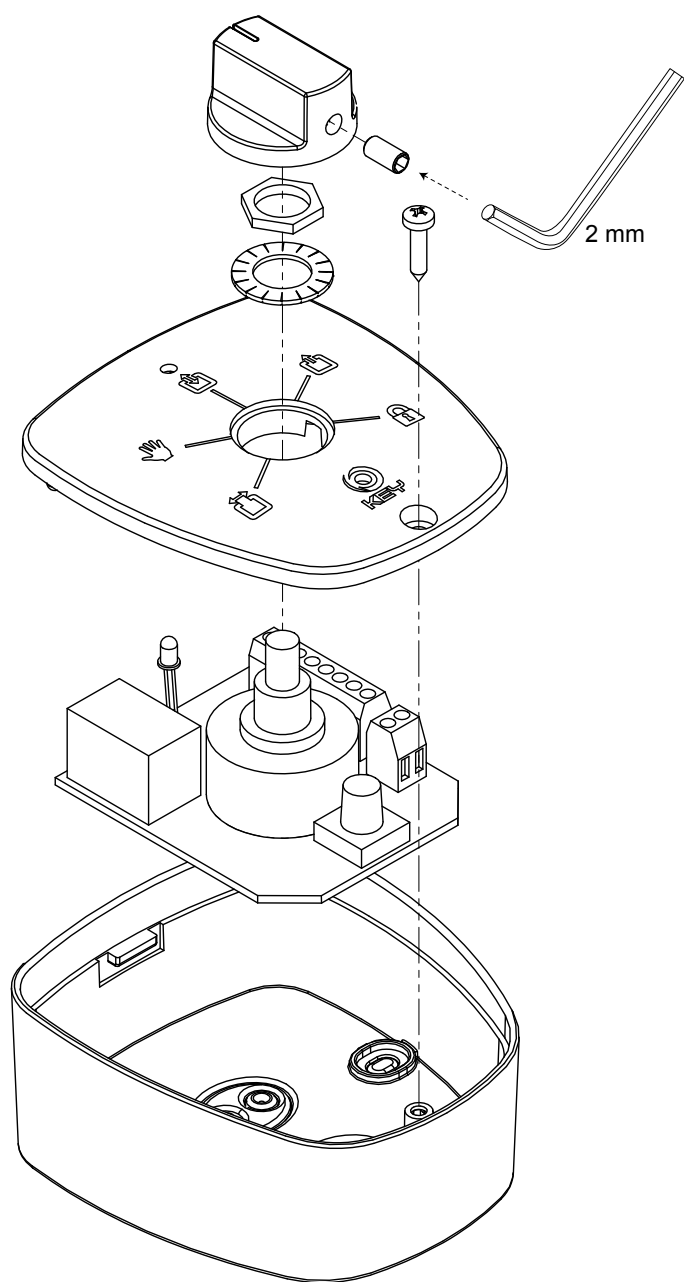


Fig.2


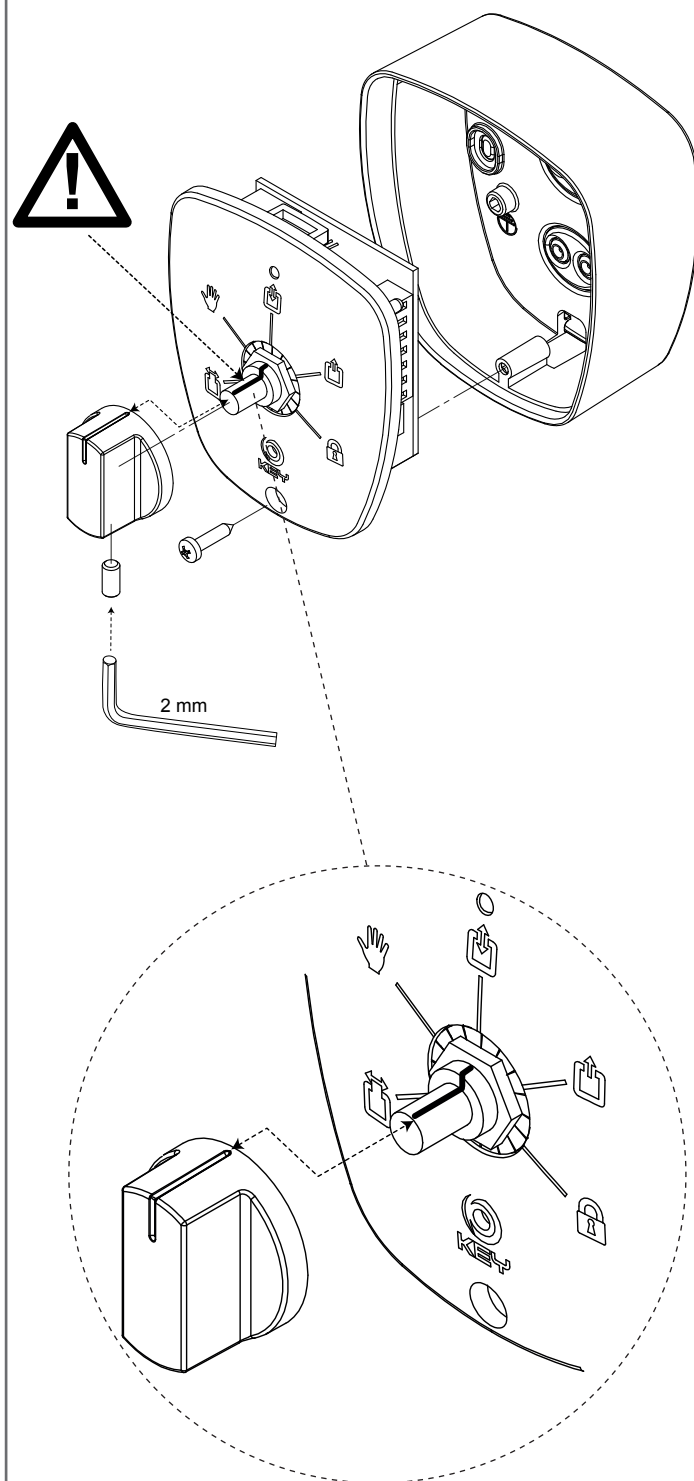


Fig.3



MODI DI FUNZIONAMENTO

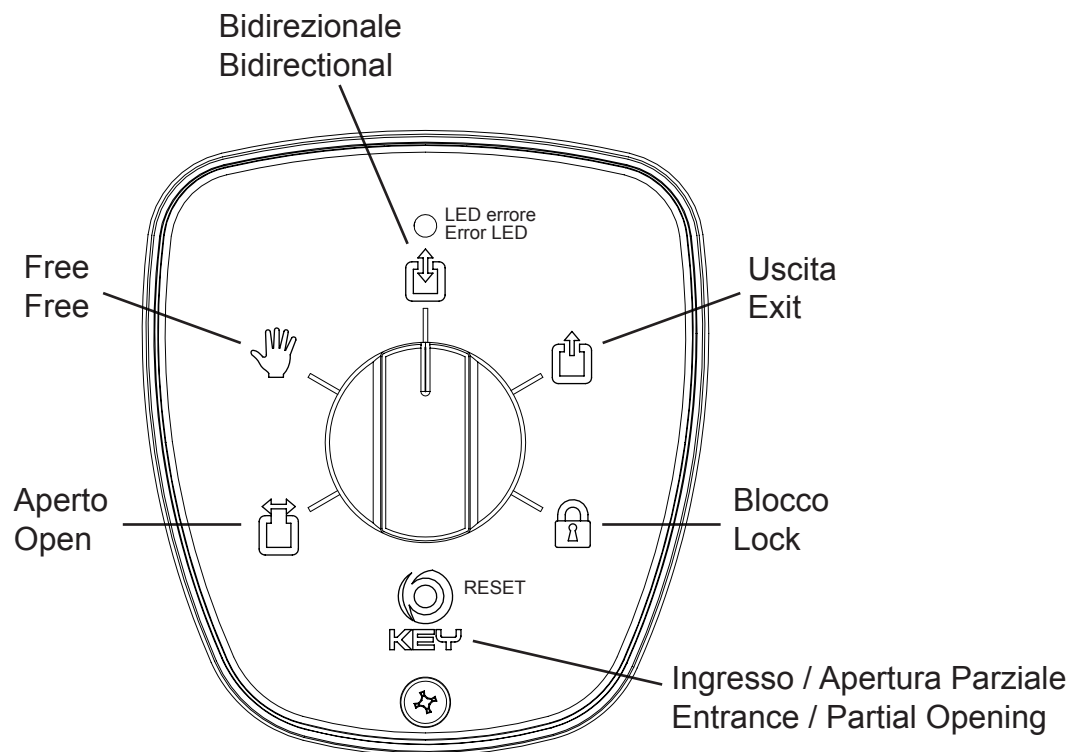

 
Bidirezionale: (la porta viene azionata da entrambi i radar). Un comando RAD INT o RAD EXT determina l'apertura della porta. Un comando RAD INT o RAD EXT durante l'apertura viene ignorato. Un comando RAD INT o RAD EXT durante la chiusura determina l'immediata riapertura.



Free: (la porta non riceve nessun comando e può essere spostata a mano). Posizionando il selettore in posizione la porta rimane libera di essere movimentata a mano ed ignora qualsiasi comando. Tale condizione permane fino a quando non viene modificata la posizione del selettore.



Uscita: (la porta viene azionata solo dal radar interno). Un comando RAD INT determina l'apertura della porta. Un comando RAD INT o RAD EXT durante l'apertura viene ignorato. Un comando RAD INT durante la chiusura determina l'immediata riapertura.



Aperto: (la porta rimane aperta e i radar sono disattivati). Posizionando il selettore in posizione "Aperto" si determina l'apertura della porta, che rimane aperta fino a quando non viene modificata la posizione del selettore.



Blocco: (la porta rimane chiusa e bloccata e i radar sono disattivati). Posizionando il selettore in posizione "Blocco" si determina la chiusura della porta e la successiva attivazione dell'elettroblocco. La porta rimane chiusa e bloccata, ignorando qualsiasi comando fino a quando non viene modificata la posizione del selettore.



Apertura parziale: Un comando RAD INT o RAD EXT determina l'apertura della porta; la corsa di apertura è ridotta ad una percentuale della corsa massima. Un comando RAD INT o RAD EXT durante l'apertura viene ignorato. Un comando RAD INT o RAD EXT durante la chiusura determina l'immediata riapertura.



Ingresso: (la porta viene azionata solo dal radar esterno). Un comando RAD EXT determina l'apertura della porta, che rimane aperta per un tempo di sosta modificabile dall'utente e poi si richiude. Un comando RAD INT o RAD EXT durante l'apertura viene ignorato. Un comando RAD EXT durante la chiusura determina l'immediata riapertura.

FUNCTIONS MODE



Bidirectional: (the door is driven by both radars). A RAD INT or RAD EXT command determines the opening of the door. A RAD INT or RAD EXT command sent during opening is ignored. A RAD INT or RAD EXT command sent during closing reopens the door immediately.



Free: (the door does not receive any commands and can be moved manually). Placing the selector the door is free to be moved manually and ignores any command. This condition remains until the selector position is changed.



Exit: (the door is driven only by the internal radar). A RAD INT command determines the opening of the door. A RAD INT or RAD EXT command sent during opening is ignored. A RAD INT command sent during closing reopens the door immediately.



Open: (the door is open and radars are turned off). Placing the selector on "Open" determines the opening of the door, which remains open until the selector position is changed.



Lock: (the door is closed and locked and radars are turned off). Placing the selector on "Lock" determines the closing of the door and subsequent activation of the electric lock. The door remains closed and locked, ignoring any command until the selector position is changed.



Partial open: A RAD INT or RAD EXT command determines the opening of the door; the opening run is reduced to a percentage of the maximum run, that can be modified by the user. A RAD INT or RAD EXT command sent during opening is ignored. A RAD INT or RAD EXT command sent during closing reopens the door immediately.



Entrance: (the gate is driven only by external radar). A RAD EXT command determines the opening of the door, which remains open for a time that can be modified by the user and then closes. A RAD INT or RAD EXT command sent during opening is ignored. A RAD EXT command sent during closing reopens the door immediately.

Key Automation S.r.l.

Via A. Volta 30 - 30020 Noventa di Piave (VE)

T. +39 0421.307.456 - F. +39 0421.656.98

info@keyautomation.it - www.keyautomation.it

Instruction version

580ISMAPAE rev.01